

BlackBerry Wireless Handheld™

Getting Started Guide

Phone button
Open the phone screen

Notification LED

Earpiece

Headset jack

USB port

Trackwheel
Select or click an item

Escape button
Exit a screen

Alt key
Type the alternate
character on a key

Backspace key

Enter key

Symbol key
Open the symbol list

Power button
Backlighting

Left Shift key

Microphone

Right Shift key



Roll the trackwheel to move the cursor and highlight items on the screen.

Click (press) the trackwheel to view the menu on most screens and to select items on the screen.

Press the Escape button to exit a screen, cancel an action, or go back one page in the browser.

Hold the Escape button to end a phone call.

Tips



Phone

- Open the phone or make a phone call Press the **Phone** button
- End a call from the Active Call screen Hold the **Escape** button
- Mute a call from the Active Call screen Press the **Phone** button
- Change the volume during a call Roll the trackwheel
- Dial a letter in a phone number Press + the letter key
- Call voice mail Hold (W)
- Assign speed dial to a letter Hold the letter
Type a phone number
- Type a phone number extension Press + (EX)
Type the extension number
- Mute a call using a headset Press the headset button
- End a call using a headset Hold the headset button



Browser

- Open the home page Press (H)
- Open the Browser Bookmarks screen Press (BK)
- Add a bookmark Press (BA)
- Refresh a web page Press (R)
- Search a web page Press (EF)
- Page down Press (SPACE)
- Go back a page Press the **Escape** button
- Stop a web page from loading Press the **Escape** button
- Go to a specific web page Press (G)
- Exit the Browser Hold the **Escape** button



Messages

- Compose from the Messages screen Press (C)
- Reply to sender Press (R)
- Reply to all Press (AL)
- Forward a message Press (F)
- Go to the next date Press (N)
- Go to the previous date Press (P)
- Go to the next unread message Press (LI)
- View sent messages Press (S) + (M)
- View received messages Press (R) + (M)
- View SMS messages Press (S) + (M)
- View voice mail messages Press (V) + (M)
- Page up in an open message Press (U)
- Page down in an open message Press (D)



Calendar*

- Change to Agenda format Press (A)
- Change to Day format Press (D)
- Change to Week format Press (W)
- Change to Month format Press (M)
- Go to the next day, week, or month Press (N)
- Go to the previous day, week, or month Press (P)
- Go to the current date Press (T)
- Go to a specific date Press (G)

*Set the **Enable Quick Entry** field to **No** to use these shortcuts in Day format.

Navigating your handheld



- Lock the handheld Set a password > Click the **Lock** icon
- Lock the keyboard Click the **Keyboard Lock** icon (only available if you have not set a password)
- Move the cursor Roll the trackwheel *or* Press + roll the trackwheel
- Return to previous screen Press the **Escape** button
- Click an item Highlight the item > Click the trackwheel
- Select multiple items Hold + roll the trackwheel
- Go to the top of a screen Press
- Go to the bottom of a screen Press
- Turn on/off the handheld Hold
- Turn on/off backlighting Press

Typing and editing



- Capitalize a letter Hold the letter
- Insert a period Press twice
- Type the alternate character on a key Press + the key
- Insert an accented character Hold a letter + roll the trackwheel
- Insert a symbol Press > Click a symbol *or* press a letter
- Select text Press > Roll the trackwheel
- Select characters Hold > Roll the trackwheel
- Copy selected text Press + click the trackwheel *or* Click the trackwheel > Click **Copy**
- Paste selected text Press + click the trackwheel *or* Click the trackwheel > Click **Paste**
- Cut selected text Press + *or* Click the trackwheel > Click **Cut**
- Cancel selection Press the **Escape** button

Wireless network coverage

To turn the wireless radio on or off click Turn Wireless On / Turn Wireless Off.

Wireless coverage
No wireless coverage
Emergency calls

	GPRS	GPRS	GSM
Emergency calls	●	●	●
SMS messages	●	●	●
Phone	●	●	●
Email and PIN messages	●		
Browser	●		

Status indicators

	battery power		voice mail message
	low battery power		Number lock on
	charging		Caps or Shift lock on
	roaming		Alt mode on
	Home Zone		
	receiving data		
	transmitting data		
	service book waiting		
	alarm set		
	TTY enabled		

How do I...



Make a phone call

1. In the phone, type a phone number.
2. Click the trackwheel.
3. Click **Call**.
4. To end the call, hold the **Escape** button.



Add a contact

1. In the address book, click the trackwheel.
2. Click **New Address**.
3. Type contact information.
4. Click the trackwheel.
5. Click **Save**.



Send a text (SMS) message

1. In the messages list, click the trackwheel.
2. Click **Compose SMS**.
3. Click **[Use Once]**.
4. Click **SMS**.
5. Type the SMS-compatible phone number.
6. Click the trackwheel.
7. Click **Continue**.
8. Type a message.
9. Click the trackwheel.
10. Click **Send**.



Send an email message

1. In the messages list, click the trackwheel.
2. Click **Compose Email**.
3. Click **[Use Once]**.
4. Click **Email**.
5. In the **Email** field, type an email address.
6. Click the trackwheel.
7. Click **Continue**.
8. In the **Subject** field, type a subject.
9. Press the **Enter** key.
10. Type a message.
11. Click the trackwheel.
12. Click **Send**.



Set a password

1. In the handheld options, click **Security**.
2. Set the **Password** field to **Enabled**.
 - Set the other fields on the screen (optional)
3. Click the trackwheel.
4. Click **Save**.
5. Type a password.
6. Press the **Enter** key.
7. Type the password again.
8. Press the **Enter** key.

Fields

Address Book Options	
Sort By:	First Name
Confirm Deleter:	Yes
Allow Duplicate Names:	Yes
Number of Entries:	10

Press the **Space** key to change the value in a field.

Press the **Alt** key to view all the values that are available in the selected field.

Menus

May 12, 2004 12:21:45	Hide Menu
9:00a	Today
10:00a	Go to Date...
11:00a	Prev Day
12:00p	Next Day
1:00p	Prev Week
2:00p	Next Week
3:00p	New
4:00p	View Week
5:00p	

Click the trackwheel to view the menu.

On the menu, click standard actions such as **New**, **View**, **Edit**, **Delete**, **Save**, **Options**, and **Help**. Additional options might appear depending on the item you have selected.

Contents

Where can I find more information?

On the handheld

- On the menu, click **Help** to see help topics associated with the application that you are using.
- On any Help screen, click the trackwheel. Click **Index** to see a list of additional help topics.

In the BlackBerry Desktop Software

- On the **Help** menu, click **Desktop Help Contents** to view the *Handheld User Guide* or the *BlackBerry Desktop Software Online Help*.

In your BlackBerry Web Client account using a desktop browser

- On the menu bar, click **Help** to view the *BlackBerry Web Client Online Help*.

Setting up your handheld 2

Insert the SIM card 2

Insert the battery 2

Charge the battery 2

Turn wireless on 3

Set up email 3

Setting up for email using BlackBerry Enterprise Server 4

Use enterprise activation 4

Use the BlackBerry Desktop Software 4

Setting up for email using BlackBerry Web Client 5

Create an account 5

Synchronize your handheld data 5

Frequently asked questions 6

Setting up your handheld

Insert the SIM card

 
Your SIM card contains important information about your wireless service. Your SIM card might be inserted already.

Warning: Turn off your handheld before you insert or remove the SIM card. Do not scratch, bend, or expose the SIM card to static electricity or wet conditions.

1. Press the battery cover release button.



2. Slide off the battery cover.
3. If the battery is inserted, remove it.
4. Slide the SIM card holder toward its hinge to unlock it.
5. Lift the SIM card holder.
6. Remove your SIM card from its packaging.
7. Insert the SIM card into the holder so that the notches align.

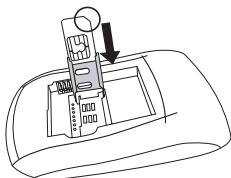


8. Close the SIM card holder.

9. Slide the SIM card holder away from its hinges to lock it.

Insert the battery

Warning: Use only the battery that Research In Motion specifies for use with your handheld. Refer to the *Safety and Product Information* booklet that accompanied your handheld for more information on using the battery safely.

 1. Press the battery cover release button.
2. Slide off the battery cover.
3. Insert the battery so that the connectors align.

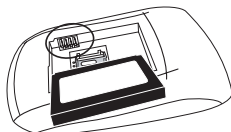

4. Replace the battery cover. If the battery is charged, your handheld turns on and a dialog box appears.
5. Click **OK**.

If the date and time are incorrect, see "How do I correct the date and time?" on page 6 for more information.

 
Charge the battery

Using the travel charger

1. Connect the smaller end of the USB cable to your handheld.



2. If your travel charger includes a removable USB cable, connect the larger end of the USB cable into the power adapter.
3. Slide the appropriate attachment piece into the power adapter.



4. Plug the power adapter into a power outlet.
5. Charge the battery to full power (approximately 3 to 4 hours).

Using your computer

To charge your handheld battery using the computer, the following system requirements must be met:

- Intel®-compatible 486 or higher computer that is compliant with USB 1.1 or later
- Available USB port
- Windows®98, Windows ME, Windows 2000, or Windows XP
- BlackBerry Desktop Software or BlackBerry Handheld Manager must be installed to obtain the required USB driver on your computer. See "Setting up for email using BlackBerry Enterprise Server" on page 4 or "Setting up for email using BlackBerry Web Client" on page 5 for more information.

Note: If you use Windows 98 (not Windows 98 Second Edition), you must download an update from http://www.microsoft.com/com/dcom/dcom98/dcom1_3.asp for the USB driver to operate as expected.

1. Connect the smaller end of the USB cable to your handheld.
2. Connect the larger end of the USB cable to an available USB port on your computer.

Note: If you connect your handheld to the computer using a USB hub, the hub must be self powered.

3. Charge the battery to full power (approximately 3 to 4 hours).

Turn wireless on

Your handheld connects to the wireless network using an internal radio.

When your SIM card is inserted and the battery is charged, turn on the radio in an area of wireless coverage.

See the inside front cover of this guide for information on wireless coverage levels and the wireless radio.

Note: If you use BlackBerry Web Client, the account setup process might begin automatically the first time that you turn on the wireless radio. See "Setting up for email using BlackBerry Web Client" on page 5 for more information.

Set up email

To begin using email on your handheld, you must integrate with an email account using one of the setup options listed in the next sections of this guide.

Setting up for email using BlackBerry Enterprise Server

Use this option if both of the following situations apply:

- you want to receive email from your corporate Microsoft® Outlook® or IBM® Lotus Notes® email account
- a system administrator is managing a BlackBerry Enterprise Server within your company

To use this option, the following system requirements must be met:

- Microsoft Outlook (Workgroup installation) with an email account on a Microsoft® Exchange Server version 5.5 or later
- Lotus Notes version 4.6 or later, with an email account on an IBM® Lotus Domino® Server version 4.6 or later

Note: If your handheld is not enabled on a BlackBerry Enterprise Server, but you want to use a corporate Microsoft Outlook email account with your handheld, you can set up for email using the BlackBerry Desktop Redirector. See "What is the BlackBerry Desktop Redirector?" on page 6 for more information.

Use enterprise activation

If enterprise activation appears on your handheld and your handheld is enabled on a BlackBerry Enterprise Server version 4.0, you can integrate your handheld with your email account over the wireless network.

1. Verify that your handheld wireless radio is on and that you are in an area of wireless coverage.
2. On the handheld, click **Enterprise Activation**.
3. Type your corporate email address.

4. Type the password provided by your system administrator.
5. Click **Activate**.

Note: Your system administrator might request that you install the BlackBerry Handheld Manager program on your computer to reduce the amount of data that is transmitted over the wireless network when your handheld is connected to your computer. If you install the BlackBerry Handheld Manager program, you do not need to install the BlackBerry Desktop Software.

Use the BlackBerry Desktop Software

If enterprise activation does not appear on your Home screen, or if your handheld is not enabled on a BlackBerry Enterprise Server version 4.0, you can install the desktop software to integrate your handheld with your email account.

1. Insert the BlackBerry Desktop Software Installation CD into your CD-ROM drive.
2. Complete the on-screen instructions.
 - Select **BlackBerry Enterprise Server or BlackBerry Desktop Redirector** as your email integration option.
 - Select **BlackBerry Enterprise Server** as your email redirection option.
3. Connect your handheld to your computer.
4. On the Windows taskbar, click **Start**.
5. Select **Programs > BlackBerry > Desktop Manager**.
 - When you are prompted to generate an encryption key, follow the on-screen instructions.

Setting up for email using BlackBerry Web Client

Use this setup option if one or more of the following situations apply:

- you purchased your handheld in a store
- you want to set up a new email account for your handheld
- you want to set up an existing email account for your handheld

Create an account

Consult your service provider's documentation for more information on setting up the BlackBerry Web Client.

Synchronize your handheld data

Install the BlackBerry Desktop Software to synchronize and back up handheld personal information management (PIM) data such as contacts and appointments, or to reconcile the status of email messages.

1. Insert the BlackBerry Desktop Software Installation CD into your CD-ROM drive.
2. Complete the on-screen instructions.
 - Select **BlackBerry Web Client** as your email integration option.
3. Connect your handheld to your computer.
4. On the Windows taskbar, click **Start**.
5. Click **Programs > BlackBerry > Desktop Manager**.

Frequently asked questions

Why does my handheld not turn on?

The power is off. Press the **Power** button to turn the power on.

The battery is not charged. See "Charge the battery" on page 2.

Remove and then reinsert the battery.

Why does my handheld not charge?

A connection is not secure. Check that all cables and plugs are fully inserted into ports and power outlets. See "Charge the battery" on page 2 for more information.

The battery is not inserted properly. Reinsert the battery so that the connectors align.

How do I correct the date and time?

1. In the handheld options, click **Date/Time**.
2. Set the date and time.
3. Click the trackwheel.
4. Click **Save**.

Why is there a book icon on the Home screen?

A new service book is available on your handheld. Service books determine which services and features are available on your handheld.

1. In the handheld options, click **Service Book**.
2. Click the new service book beside the book icon.
3. Click **Accept**.

Why can I not send or receive email?

Verify that the handheld wireless radio is on and that you are in an area of wireless coverage. See the inside front cover of this guide for more information on the wireless radio and levels of wireless coverage.

Verify that you have integrated your handheld with an email account. See "Setting up for email using BlackBerry Enterprise Server" on page 4.

How do I connect my handheld to the BlackBerry Desktop Software?

If the desktop software is installed on your computer, your handheld should connect to the desktop software automatically when you connect the handheld to the computer. If your handheld does not connect, open the BlackBerry Desktop Software.

1. Click **Options > Connection Settings**.
2. From the drop down list, select the correct port.
3. Click **Connect**.

If the connection problems continue, close the BlackBerry Desktop Software and disconnect the handheld. Open the desktop software again and reconnect the handheld. Verify that all connections are secure.

Why can I not use shortcuts on the Home screen?

By default, you can quickly dial phone numbers from the Home screen. To use shortcuts on the Home screen, in the phone, click **Options**. Click **General Options**. Set the **Dial From Home Screen** field to **No**.

What is the BlackBerry Desktop Redirector?

If you use Microsoft Outlook (Workgroup installation) with an email account on a Microsoft Exchange Server version 5.5 or later and your handheld is not enabled on a BlackBerry Enterprise Server, you can use the BlackBerry Desktop Redirector to set up email on your handheld.

1. Insert the BlackBerry Desktop Software Installation CD into your CD-ROM drive.
2. Complete the on-screen instructions.
 - Select **BlackBerry Enterprise Server or BlackBerry Desktop Redirector** as your email integration option.
 - Select **BlackBerry Desktop Redirector** as your email redirection option.
3. Connect your handheld to your computer.
4. On the Windows taskbar, click **Start**.
5. Click **Programs > BlackBerry > Desktop Manager**.
 - When you are prompted to generate an encryption key, follow the on-screen instructions.

Your computer must be on and the BlackBerry Desktop Redirector must be running to send and receive email on your handheld.

Can I set up email using both BlackBerry Enterprise Server and BlackBerry Web Client?

Yes. Complete the steps in "Setting up for email using BlackBerry Enterprise Server" on page 4 followed by the steps in "Setting up for email using BlackBerry Web Client" on page 5.

How do I reset my handheld?

Only reset your handheld if the handheld does not respond for more than a few minutes, or if your system administrator or service provider has advised you to reset your handheld.

To reset your handheld programs (a soft reset), press the **Alt** key + the **Shift** key + the **Backspace** key.

To reset your handheld hardware and programs (a hard reset), remove and then reinsert the battery.

Customer support

BlackBerry support website:

www.blackberry.com/support

© 2004 Research In Motion Limited. All Rights Reserved. The BlackBerry and RIM families of related marks, images, and symbols are the exclusive properties of, and trademarks of, Research In Motion Limited (RIM). All other brands and marks are the properties of their respective owners. IBM, Lotus, Domino, and Lotus Notes are trademarks of International Business Machines Corporation in the United States, other countries, or both. Intel is a registered trademark of Intel Corporation or its subsidiaries in the United States and other countries. Microsoft, Outlook, and Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries. There are no warranties, express or implied, with respect to the contents of this document, and all information provided herein is provided "as is". In no event shall RIM or its affiliates be liable to any party for any direct, indirect, special, or consequential damages in connection with your use of this document, including, without limitation, loss of business revenue or earnings, lost data, damages caused by delays, lost profits, or a failure to realize expected savings, even if RIM was expressly advised of the possibility of such damages. RIM reserves the right to periodically change information that is contained in this document; however, RIM makes no commitment to provide any such changes in a timely manner or at all. Your handheld might vary from the depictions on this document.

Published in Canada.

PRINTSPEC-005

MAT-08076-001

Model numbers: R6231GE, RA031GN

